


RA3PR/FL





KammBar

Instructions

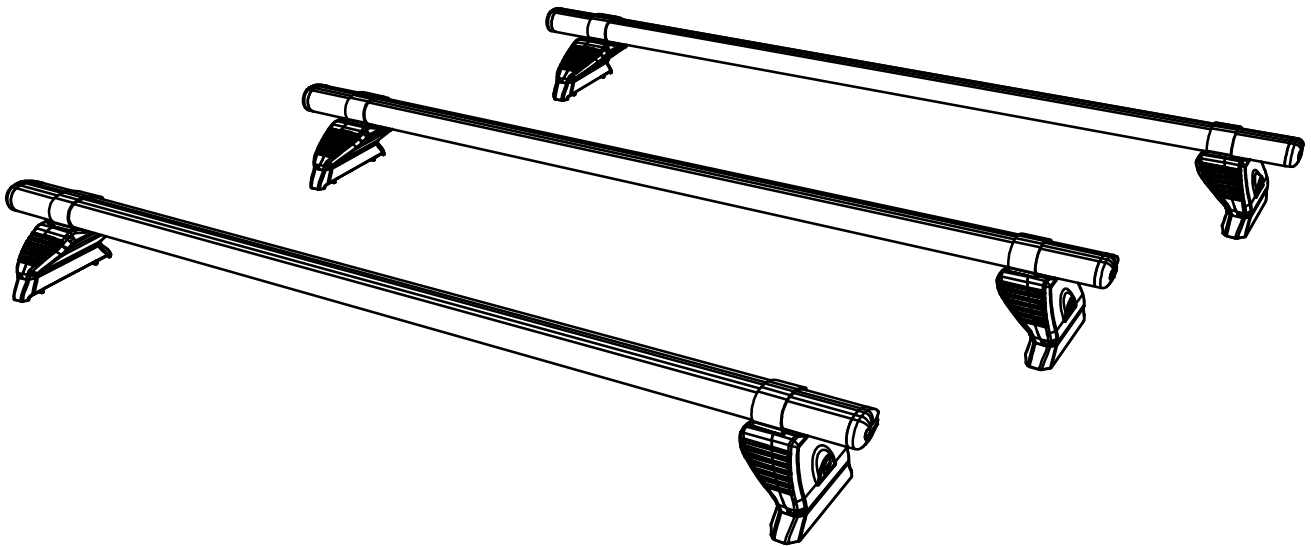


CITY CRASH (✓)

According to ISO/ PAS 11154:2006

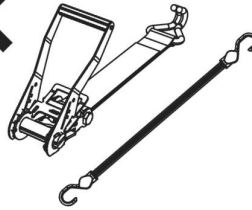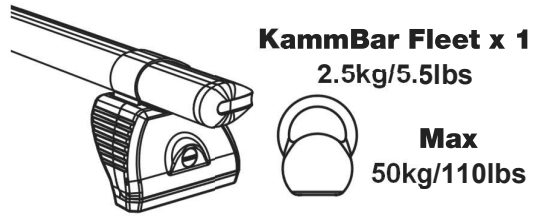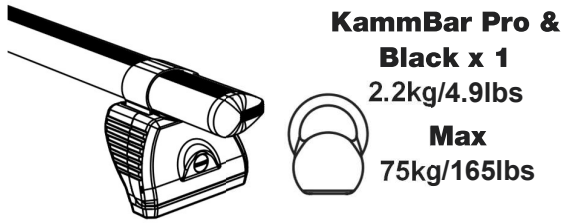

KammBar Pro & Black

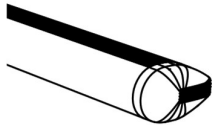

**SA420/
SA537 x 3**



KLS2 x 1




SA397 x 3



SA398 x 3


KammBar Fleet

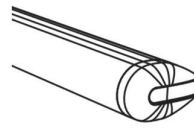


SA394 x 3



C04 x 3
*optional

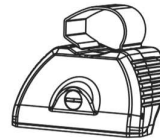


SA397 x 3

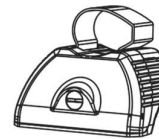


SA398 x 3


Fitting Kit



PS181 x 2




PS182 x 2



PS178 x 2



PS046 x 6




FW001 (M6) x 12



FW008 (M6) x 12



FT01 x 1



**FS102
(M6 x 75) x 2**



**FS145
(M6 x 70) x 2**




**FB009
(M6 x 65) x 4**




**FS039
(M6 x 30) x 4**

1.

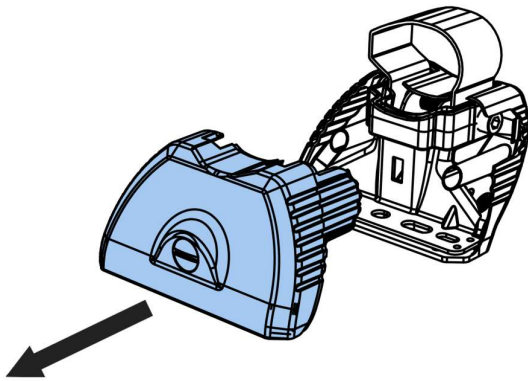

2.

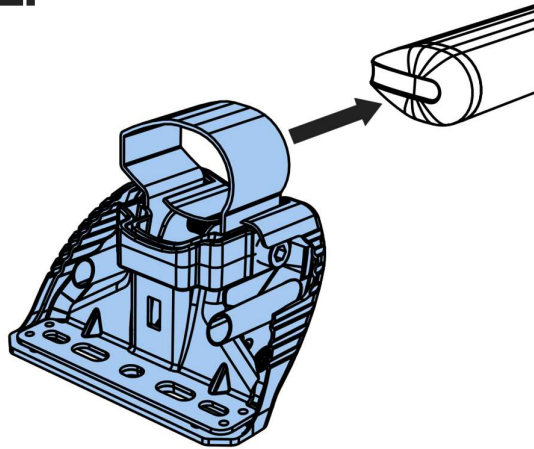

3.




SA397

PS182




SA397

PS178



SA397

PS181

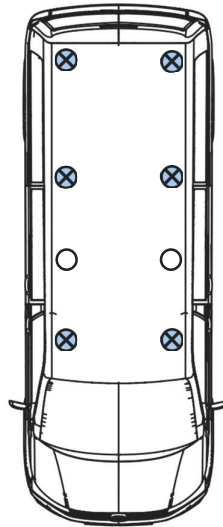

SA398

PS182



SA398

PS178




SA398


PS181









4.

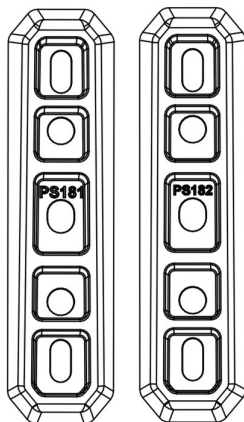


5.

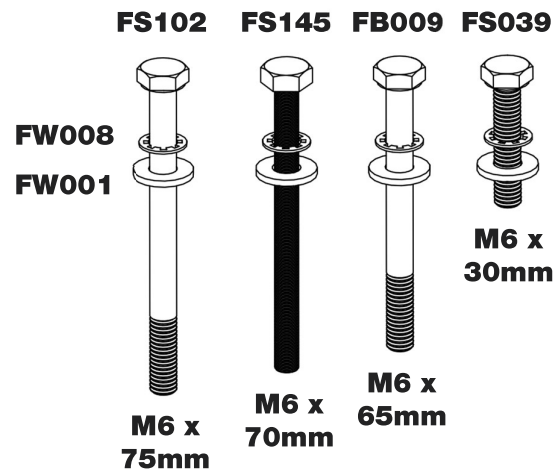


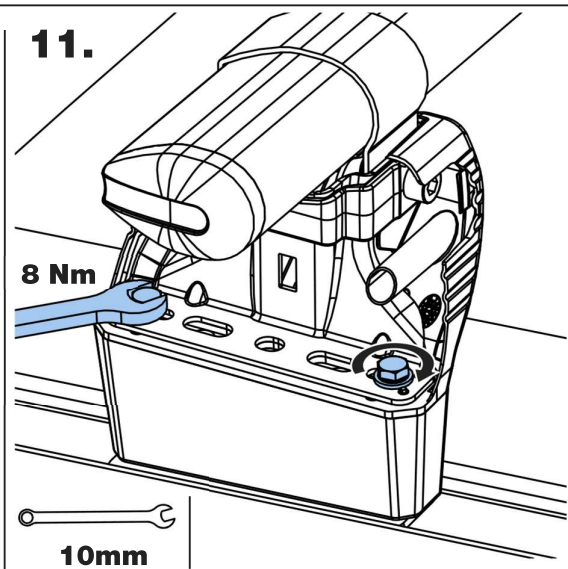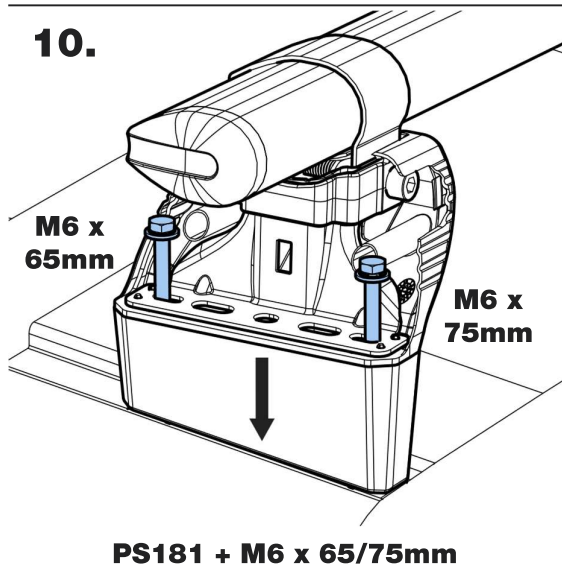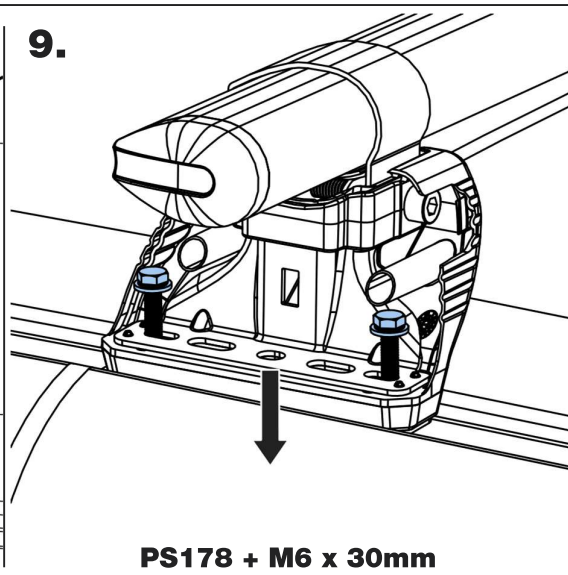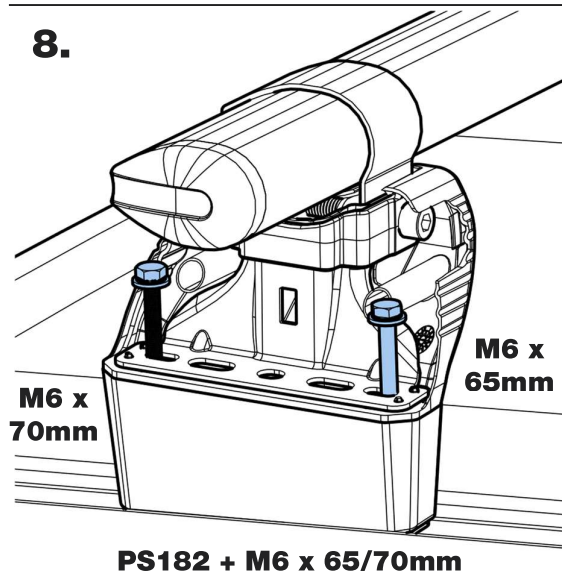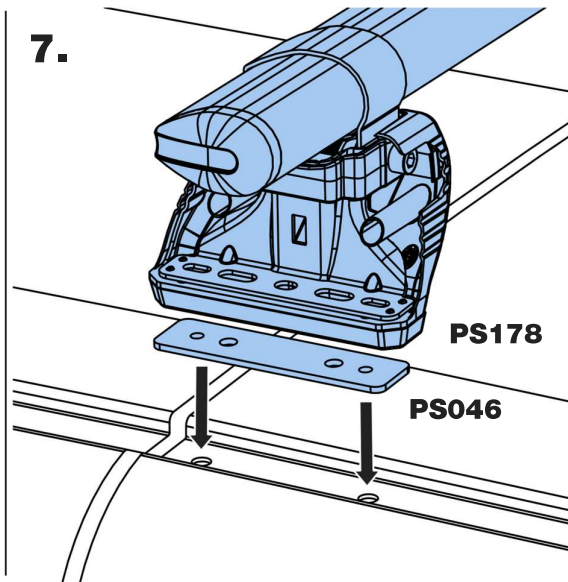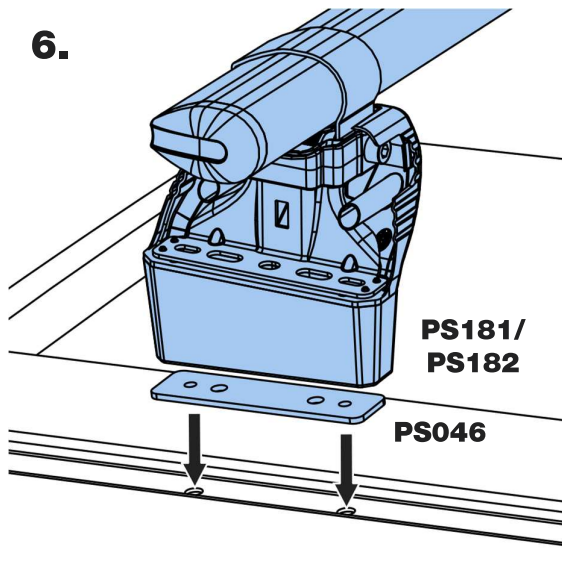


12.

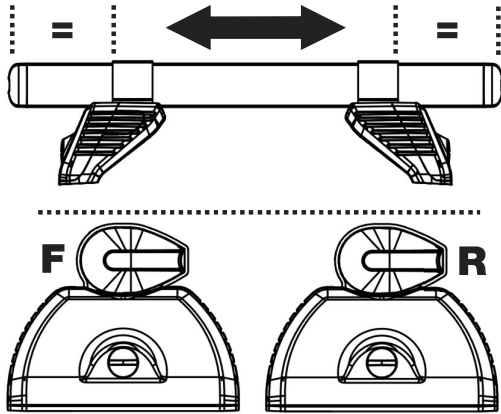

13.

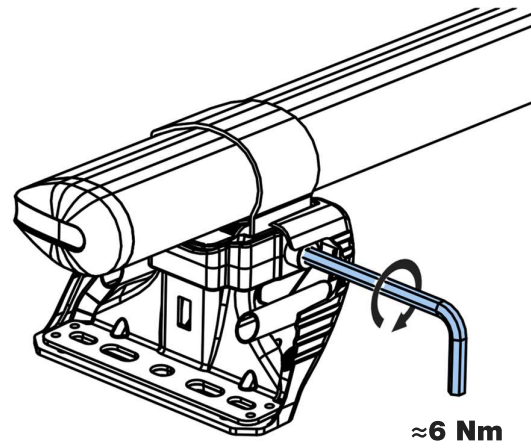

14.

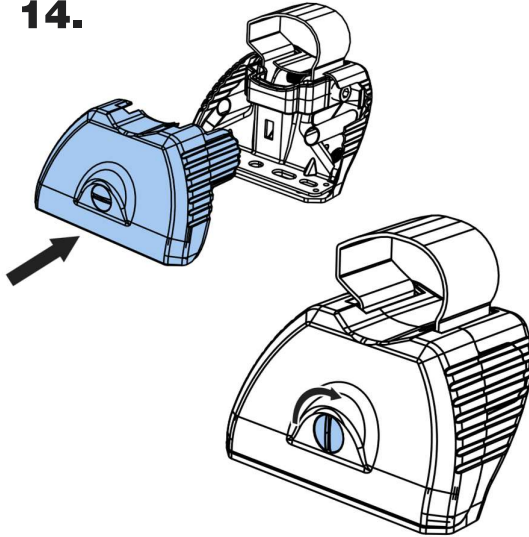

15.

