


FK1251FI


MR4

Instructions

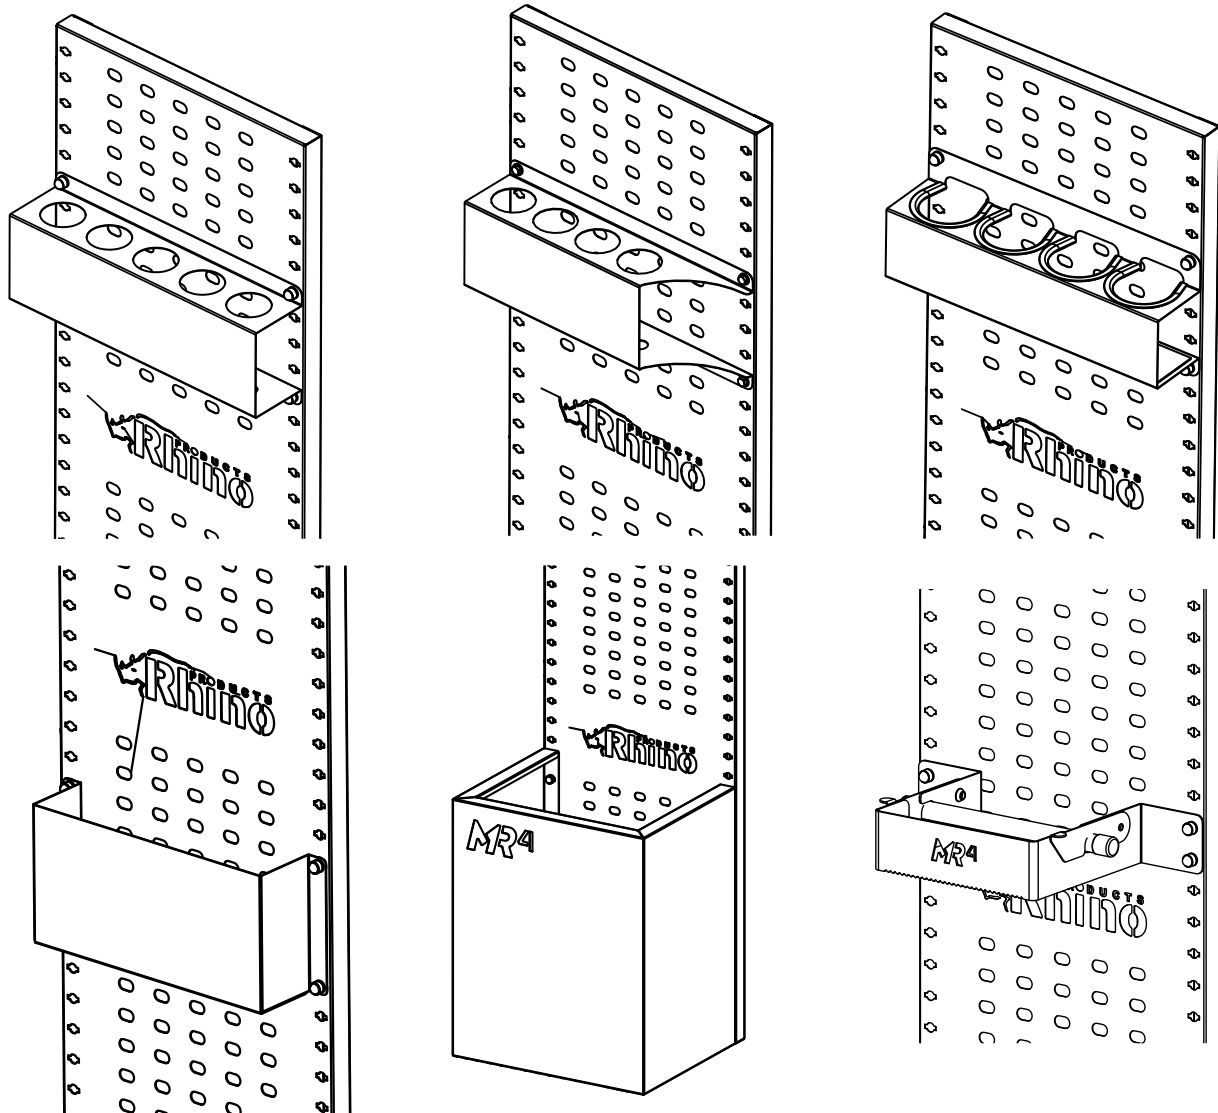




≈5 min




10mm

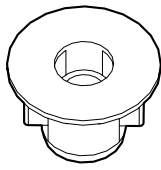


FN003

x 4




FS188

x 4




FW001

x 4



FW004

x 4

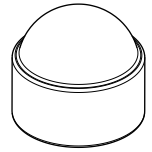


PS259


x 4




AC1
MS1757

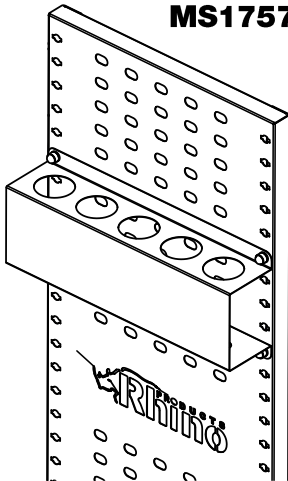


AC2
MS1758

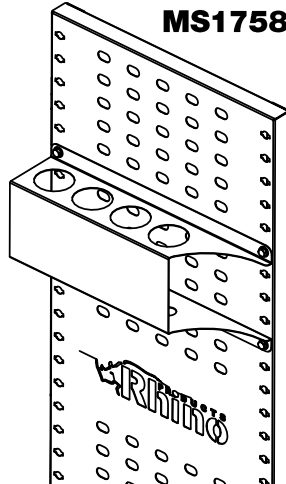


AC3
MS1778

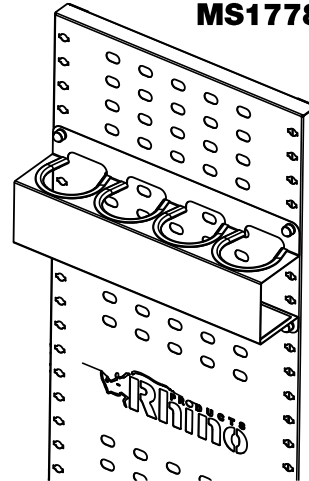


AC25
MS1999

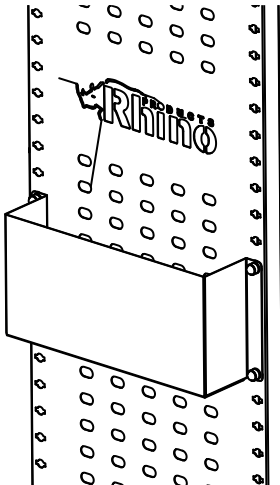



AC22
SW515

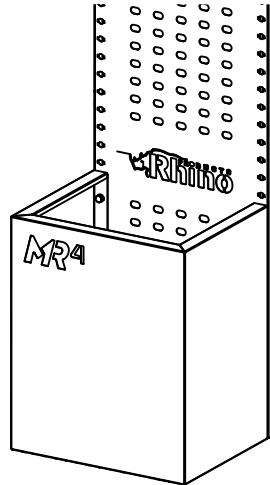


AC26
SA527

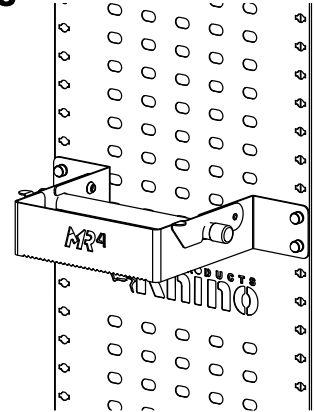

AC22

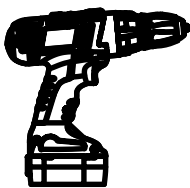


8mm



FS296




x 9

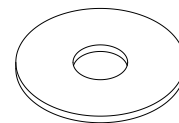


FW011

x 9




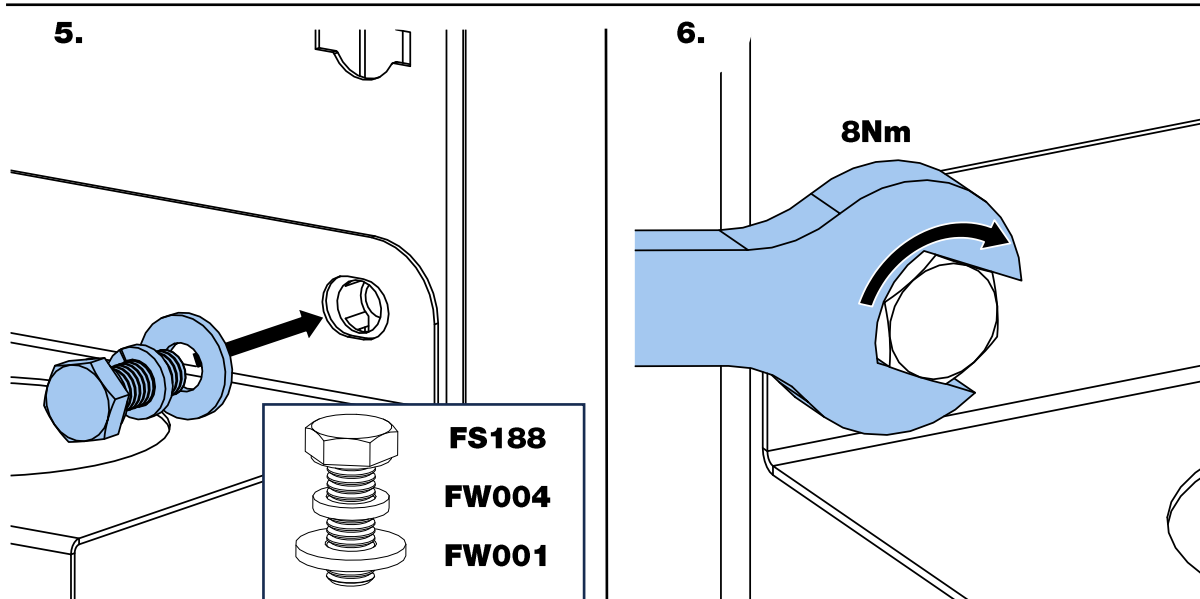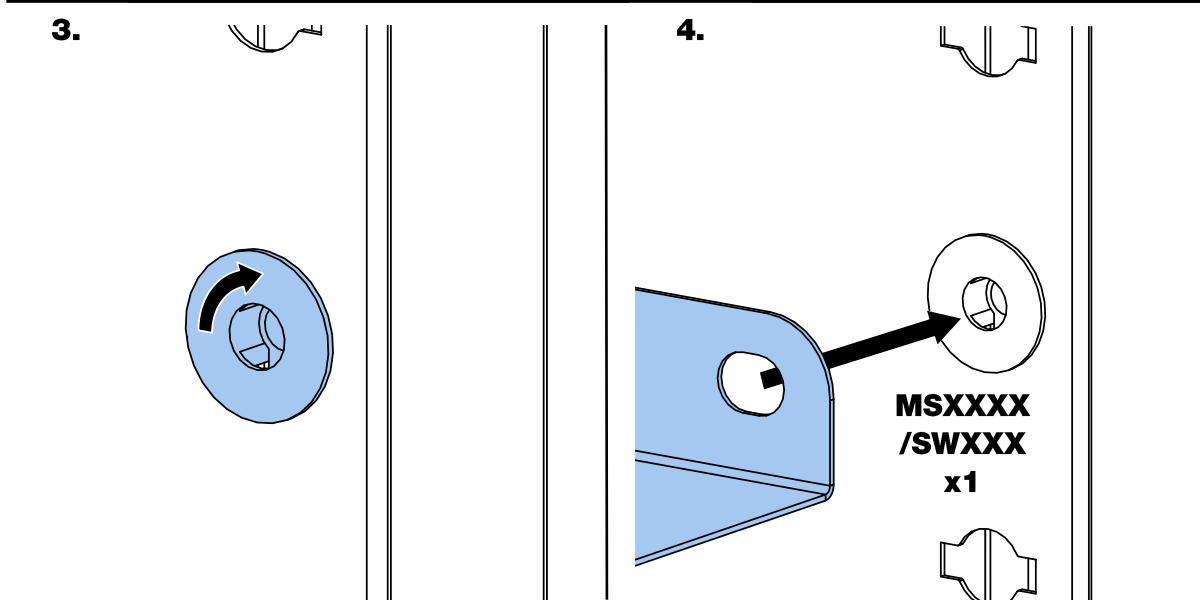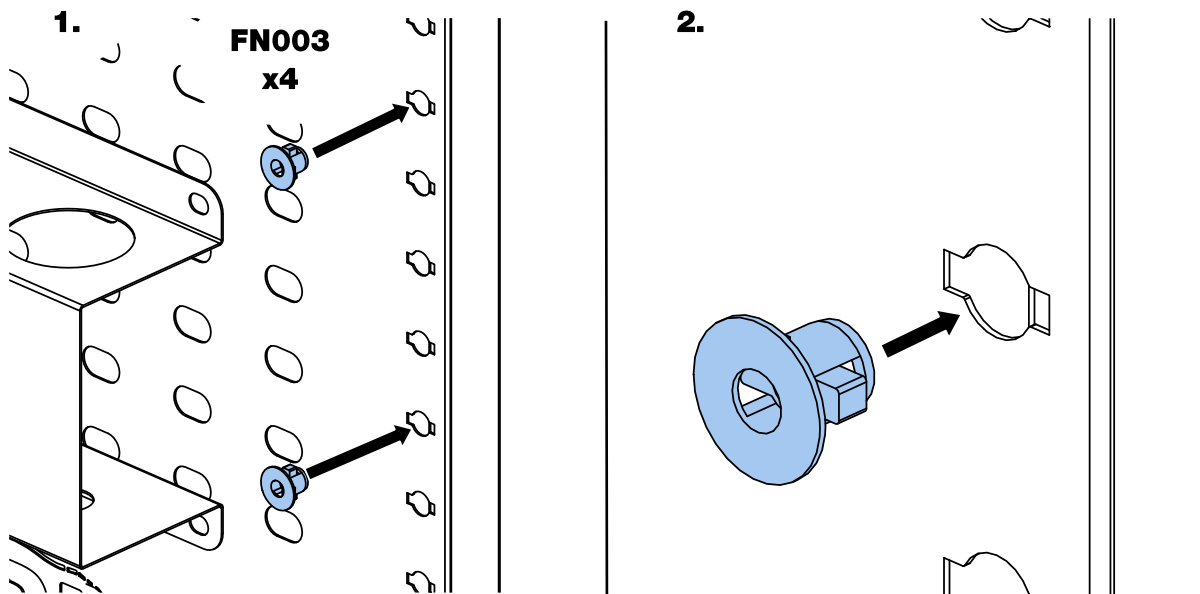

7.

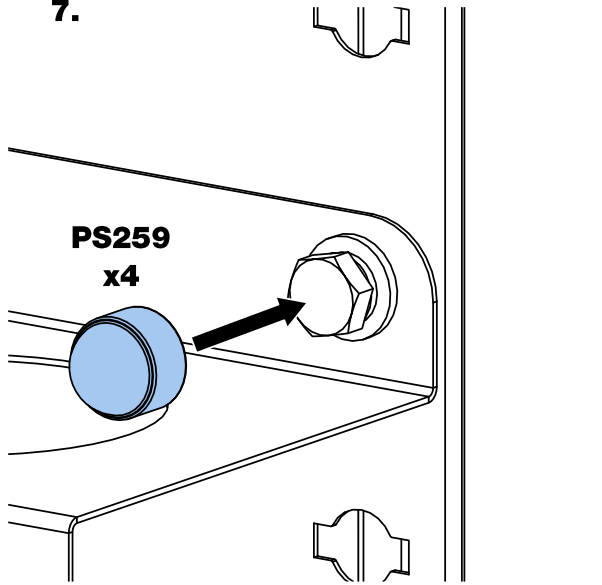

AC22

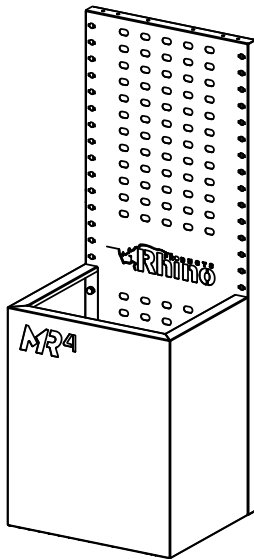

1.

